

INSTRUCTIONS


1700RD SERIES ROOM DIVIDER HARDWARE


www.johnsonhardware.com

For 1" (25.4mm)
or 1-3/8" (35mm) Doors
weighing up to
15 lbs. (6.8kg) each.
9" (228mm)-18" (457mm)
wide panels up to
6/8 (2032mm) tall.
Maximum 6 panels one way.


HARDWARE REQUIRED FOR INSTALLATION

SET A - FIRST 2 DOORS - 1 PIVOT SET (1701-1707, 1710 & 1711) 1-1742 HANGER, 3-1606 HINGES, 1-33 KNOB, 1-1713 STOP SET B - EACH PAIR OF DOORS THEREAFTER 1-1742 HANGER, 6-1606 HINGES, 1-33 KNOB

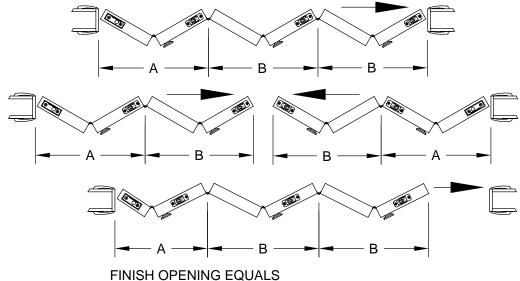

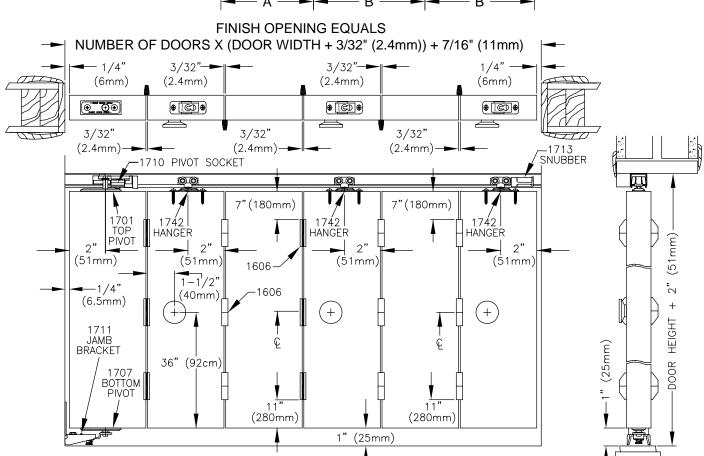

 
CUT TRACK TO LENGTH. Insert pivots, hangers and snubber as required. Fasten track to center of top header. Locate 1710 Pivot Socket in proper position and fasten in place. Unlock pivot socket by moving lock tab away from jamb.




EDGE MOUNT

HINGES should be located as specified 7" (180mm) from top and 11" (280mm) from bottom, center middle hinge between.

 
Hinge half with pin should always be on side of panel furthest from jamb with pin pointed up and on alternating sides of door as shown.



 Use centerline of doors if mounting plates in center. Fasten with pan head screws furnished. Bottom pivot plate is located 5/8" (16mm) from edge of door (2" (51mm) to center of pivot).




Depress pivot socket, align pivot pin over hole and lock door into place by releasing socket.

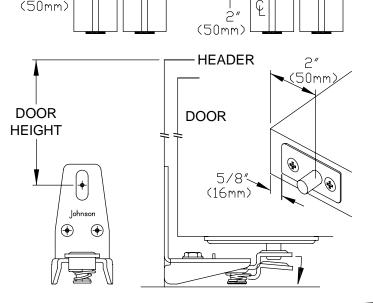

HANG rest of doors by dropping door down over hinge in preceeding panel. Clip hangers in place on respective doors.

The quickest way to align hinge pins is to butt edges of doors together which automatically aligns pins. Lower into place.

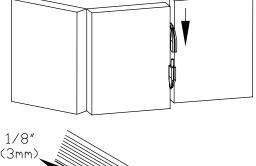

CENTER MOUNT

to jamb or until desired location is reached. Tighten in place. Adjust pivots, if necessary, to achieve proper operation.