




L.E. Johnson Products, Inc.  
 2100 Sterling Ave.  
 Elkhart, IN 46516  
 Ph: (574) 293-5664  
 Fax: (574) 294-4697  
 info@johnsonhardware.com  
 www.johnsonhardware.com



# 134F

Commercial Bypass Track and Hardware  
 for 1 3/4" Thick Panels to 125 lbs. (200 lbs. w/1125 Hanger) per Panel

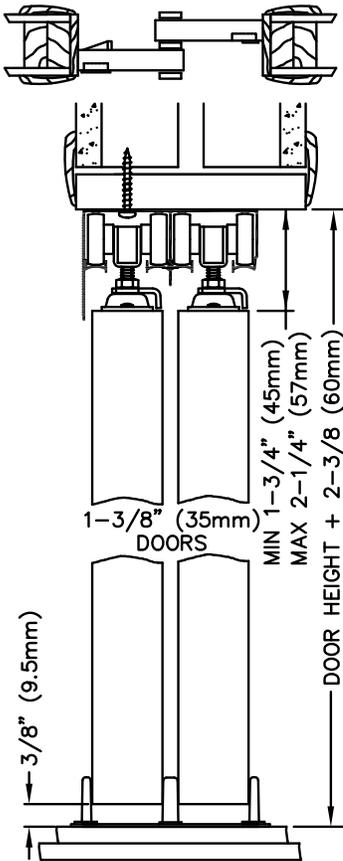

The finest bypass hardware sets you can buy. Ideal for those luxury homes or commercial installations where quality, trouble free, long life is a necessity. Precision extruded aluminum track features Johnson's line-design fascia to hide fingerprints or to hold paint if desired. Tricycle hangers ride smoothly on convex shaped rails with a single point contact and are adjustable for height. Available package sets to 8', bulk by component with track to 16'.

## 134F Exceptional Features

### Deluxe Aluminum Track Design

Strong aluminum track is precision extruded. Available in clear mill finish or anodized bronze finish. Attractive line design fascia hides fingerprints, holds paint, enhances appearance of both door by hiding

gap at top of door. Convex rails provide one point contact for wheels to ride on. Dirt traps on both sides allow hanger wheel to keep free from troublesome dust.

### Balanced-Wheel Hangers

Tricycle hanger design gives even weight distribution to track rails, will not bind. Machine turned, balance nylon wheels for feather touch operation. Height adjustment allows for changes in structure. Door mount or dismount with a flip of a clip.

### Adjustable Door Guide

Doors are held in firm alignment by attractive woodtoned bottom guides. Pivoting molded nylon guide posts are always true with door and adjustable for slight door thickness variations.



### Complete Hardware Set




134F Track



1120 Hanger

2134 Door Guide

30 Pull (2 1/8" dia.)

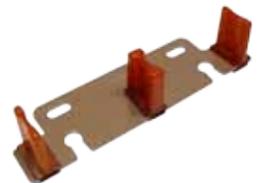

134F HD and Bronze include 1125 Hanger and 2035 Guide

1155/2155 Stops (4 Door Sets Only)



Plus all screws and instructions

Compatible with optional 1060 Soft Close Assembly

**SOFT-Close/Open**

See online at: [www.johnsonhardware.com/138F.htm](http://www.johnsonhardware.com/138F.htm)





## 118F/138F/134F Installation Overview

**PREPARE OPENING CAREFULLY:** MAKE SURE CORNERS ARE SQUARE, HEADER IS LEVEL AND JAMBS ARE STRAIGHT.

**PREPARE LA ABERTURA CON CUIDADO:** ASEGÚRESE QUE LAS ESQUINAS, ESTÉN EN ESCUADRA, QUE LA CABECERA ESTE NIVELADA, Y QUE LAS JAMBAS ESTÉN RECTAS.

**PREPAREZ L'OUVERTURE AVEC PRECAUTION:** ASSUREZ VOUS QUE LES COINS SONT A ANGLE DROIT, QUE LE LINTEAU EST A NIVEAU ET QUE LES MONTANTS SONT DROITS.

