



INSTRUCTIONS

FOR USE WITH
100PD/1500/1560/1562/2710
POCKET DOOR HARDWARE
AND
100SD/134F/138F/2610F
SLIDING DOOR HARDWARE

1060 SOFT CLOSE

www.johnsonhardware.com

100PD/1500/1560/1562/2710 Pocket Door Instructions:

Instructions are for installing the 1060 Soft Close in a Pocket Door Frame using JOHNSON 100 Series Track.


Minimum Door Thickness 1" (25mm)

Soft Close *or* Soft Open only, Minimum Door Width 24" (609mm).

Soft Close *and* Soft Open, Minimum Door Width is 28" (711mm).


Following steps are for soft close.

- 1 IF FRAME is already installed, disconnect Hangers from Door Plates and remove door. Remove both Hangers from track-Remove Door Plates from door.
- 2 ATTACH 1121 Door Plates 2-3/4" (70mm) from door edge.
- 3 INSERT 1125 Ball Bearing Hanger Wheel assembly into Track.

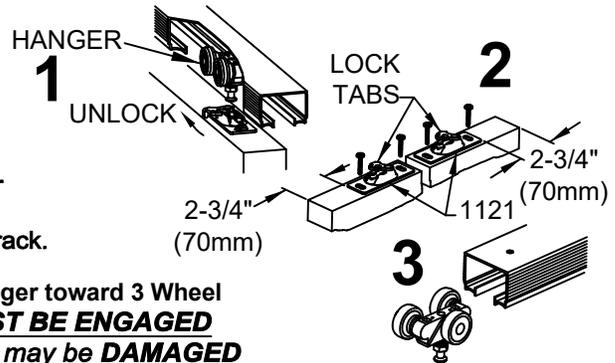


- 4 Engage Soft Close Dampener by pushing Dampener trigger toward 3 Wheel Roller. ***This step is very important. DAMPENER MUST BE ENGAGED*** or soft close will not work, 1060 Soft Close Dampener may be ***DAMAGED*** if installed incorrectly. Door will have to be removed and installation of 1060 will have to begin again.


**IMPORTANT
MUST BE ENGAGED**

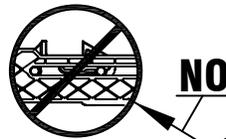


SHOWN IN "ENGAGED" POSITION

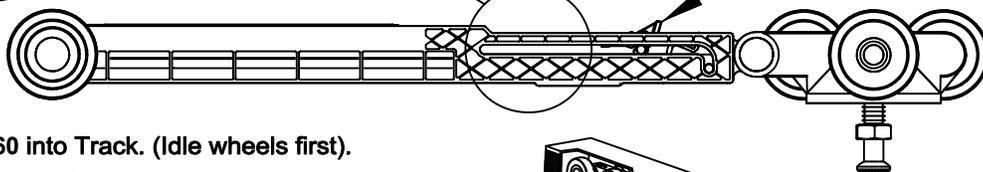

- 5 INSERT 1060 into Track. (Idle wheels first).

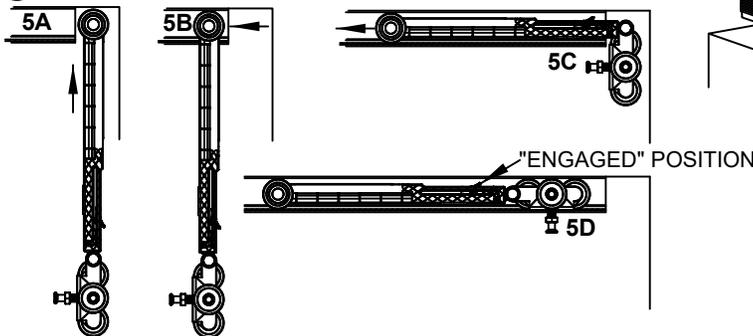

- 6 HANG DOOR.

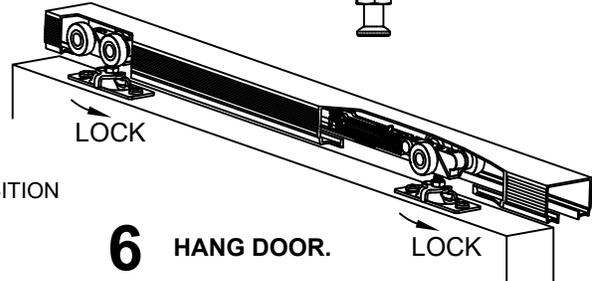

- 7 SLIDE door away from end of track (check to make sure all track screws are flat against track) and install 1060 Actuator Arm into track, with back of Actuator Arm 2-1/4" (57mm) from Jamb.

HAND TIGHTEN (do not use power drill) Actuator Arm on track Check to make sure Arm stayed straight in track. Slowly close door, checking to make sure door touches Jamb, if not. Slide door away from Jamb and readjust Actuator Arm. Slowly close door again, checking to make sure soft close is working properly. Once confirmed, begin using door normally.

