




INSTRUCTIONS


For 1/2" (12.5mm)
Tempered Glass Door Panel
Maximum Door Weight 400 lbs. (182kg.)

200 POCKET DOOR GLASS DOOR HARDWARE


www.johnsonhardware.com

- Prepare opening to dimensions as shown on 2000 & 2060 instruction's.
- Insert 2020 Hanger wheels into track with locking levers facing ends of track.

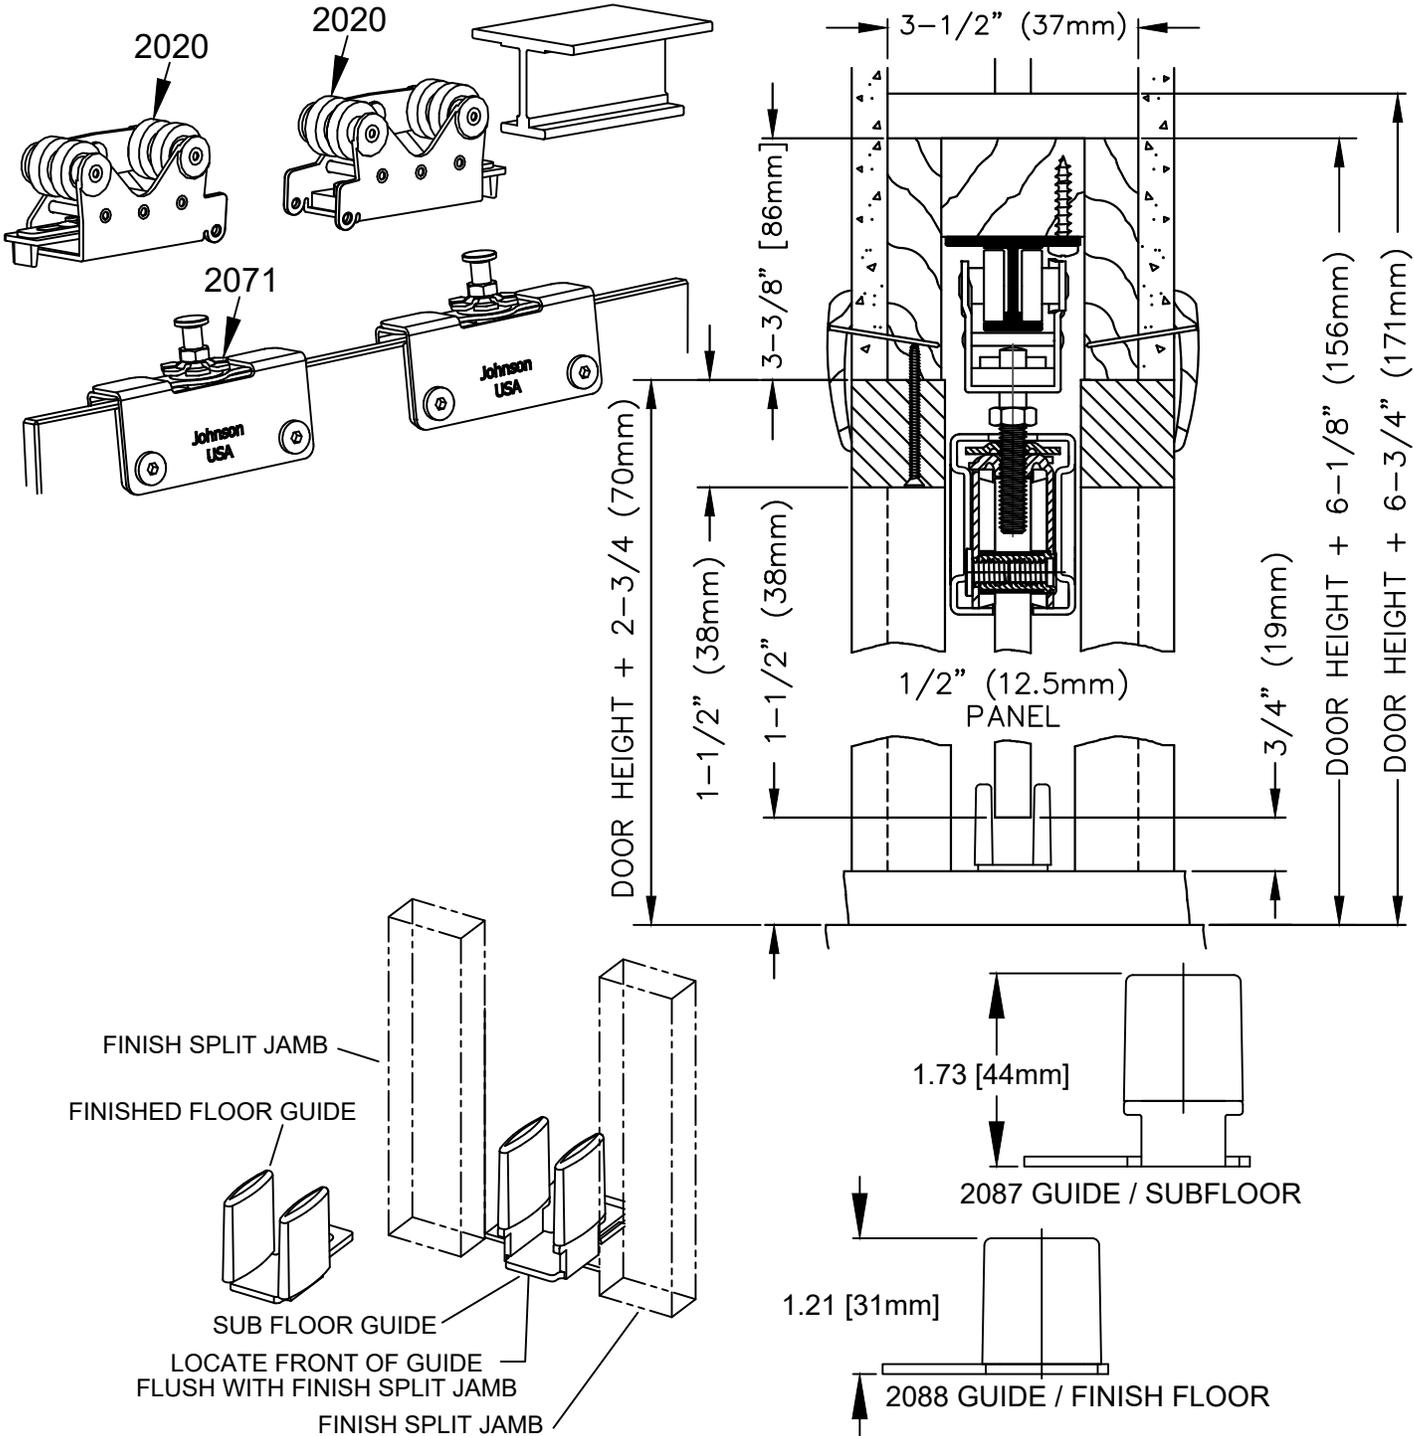


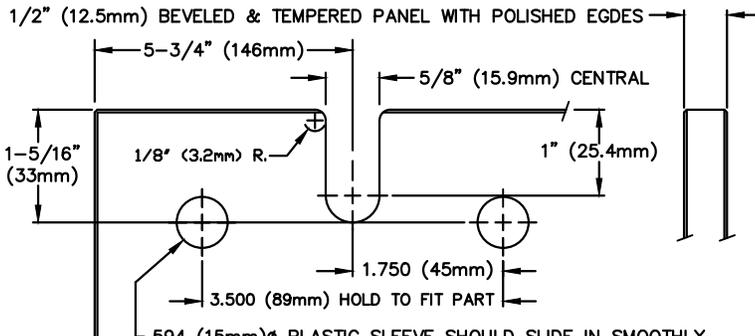


1 HAVE GLASS beveled, drilled and tempered per illustration.

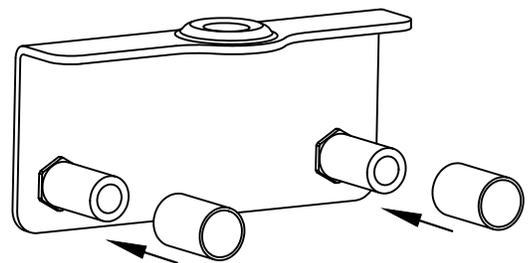


2 SLIDE PLASTIC SLEEVES over hanger post.

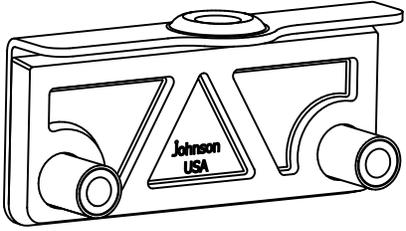


3 INSERT RUBBER PAD over post with smooth side facing metal plate.

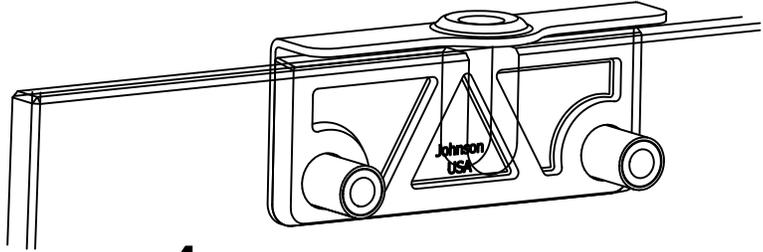


4 INSERT DOOR PLATE into holes drilled in door.

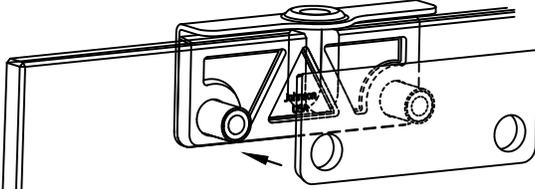


5 INSERT SECOND RUBBER pad on other side of glass, smooth side facing away from glass.

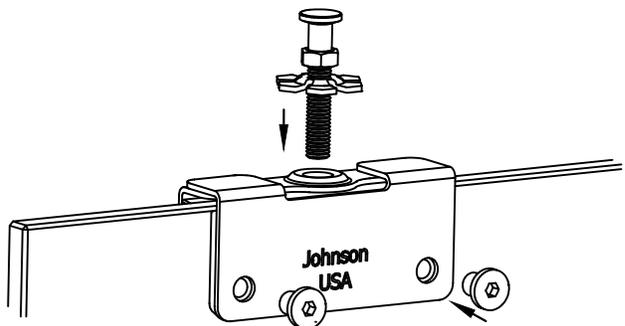


6 LAY OTHER HANGER PLATE against pad and thread 3/8" screws into metal post. Thread hex slotted Locknut onto adjusting bolt, then thread adjusting bolt into door plate.

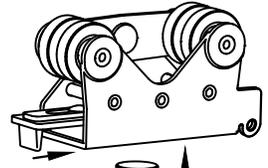

CLEAR ANY DEBRIS FROM TRACK AND WHEELS PRIOR TO HANGING DOOR.

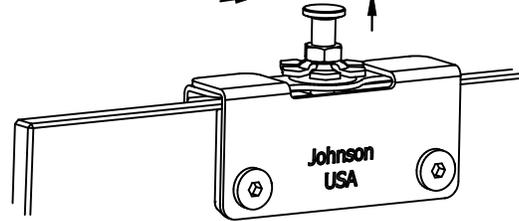

7 HANG GLASS DOOR. Adjust Hanger then tighten locknut.

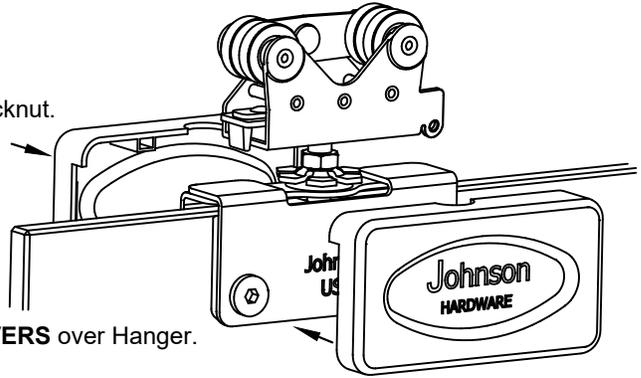

8 SNAP HANGER COVERS over Hanger.