


# INSTRUCTIONS


## Cutting Instructions

### for unmarked frames or non standard door widths


**1** Mark Header and Side Nailers for door size.

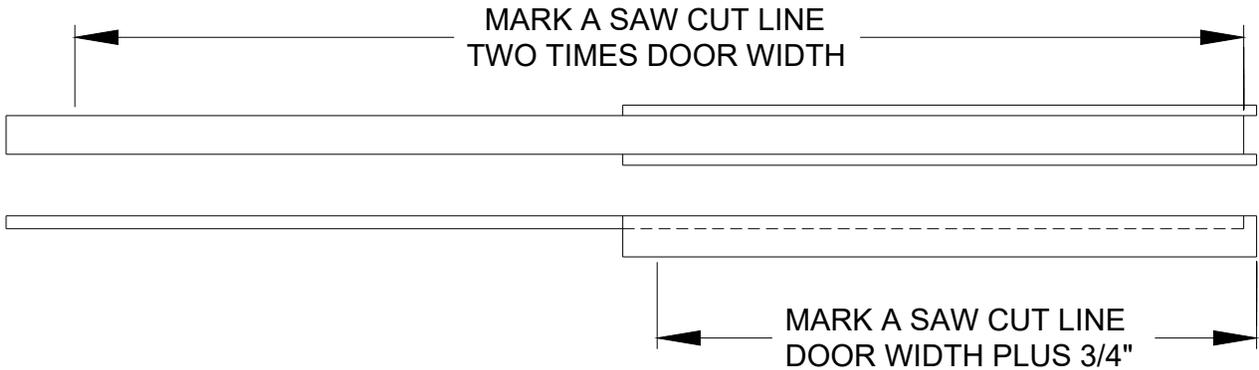


**2** Remove Adjustable End Bracket.

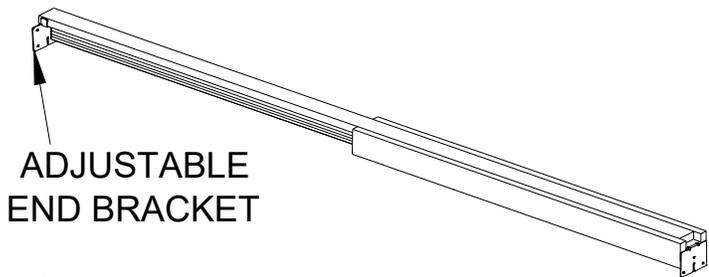


**5** Replace Adjustable End Bracket on new cut end of header.

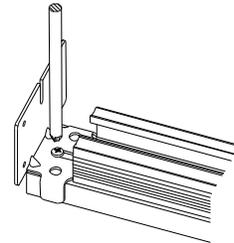


**3** Cut through WOOD part of header only at mark.

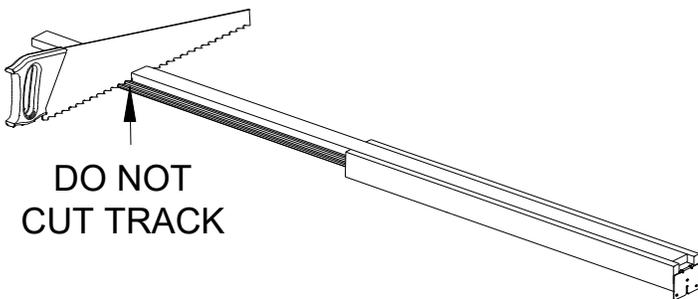

**6** Turn Header on side and cut Side Nailer Trim Board ONLY at mark. Remove cut off end and discard.

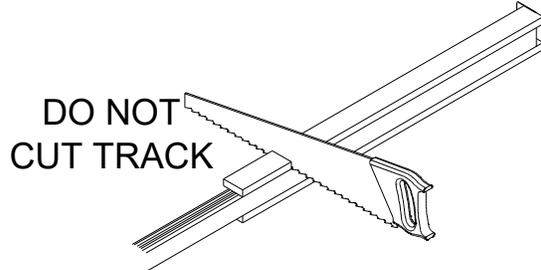

**4** Turn Header over and cut Track 1-3/8" shorter than wood Header.

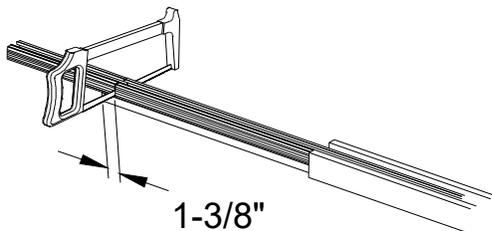

**7** Repeat step #6 on the other Side Nailer Trim Board.

