




www.johnsonhardware.com

# INSTRUCTIONS

## 151558PL SERIES

### POCKET DOOR FRAME PLYWOOD REINFORCEMENT BRACKETS

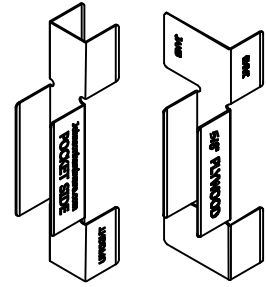

Use w/1500HD - 1500SC - 1560 - 1562 - 2000 Series Pocket Door Frames  
(Instructions are for a Pocket Door Frame with a door up to 3/0 wide)


**1** **INSTALL** header according to Pocket Door Frame Instructions. *See Steps 1,2,3 and 4.*

**2** **CUT** 5/8" plywood sheets: (4 Pieces Required)

**PLYWOOD WIDTH:** Door width - 4" divided by 2 = Plywood width.  
*Example: 36" door, minus 4" = 32" divided by 2 = 16" plywood width.*

**PLYWOOD HEIGHT:** Height should equal Door Height plus 4"  
for the 1500HD - 1500SC -1560. 1562 Series Pocket Door Frame is  
door height plus 4-3/4". 2000 Series Pocket Door Frame is door height plus 6-1/4".

**3** **TO** each side of the "Pocket End" rough stud, attach 4 each of the 1557  
plywood brackets with the 3/4" x #6 Pan Head Screws.  
(1- Bracket - 4" from floor, 1- Bracket 12-1/2" from rough header,  
the other 2- Brackets spaced equally between original 2- Brackets)


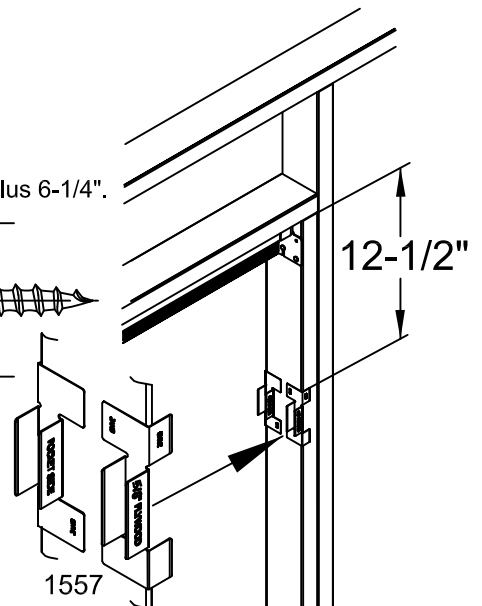


5/8" PLYWOOD  
(FACING OUTWARD)

1558

**4** **ATTACH** 4 - 1558 Plywood Brackets  
to one end of 2 - plywood sheets.  
(1- Bracket - 4" from floor,  
1- Bracket 12" from top,  
the other 2- Brackets spaced  
equally between original 2- Brackets)

**5** **INSERT** the end without  
Brackets of the 2 - plywood  
sheets into the 1557 -plywood  
Brackets attached to the rough stud.

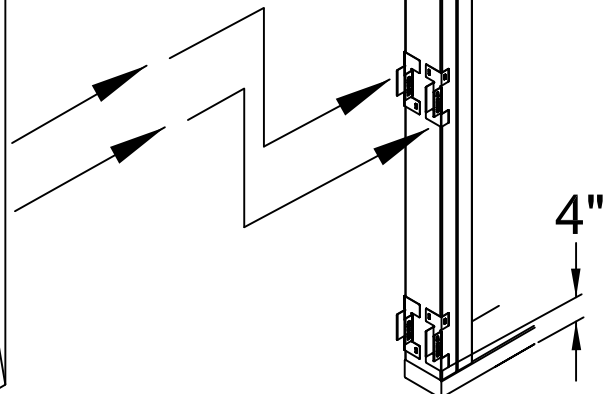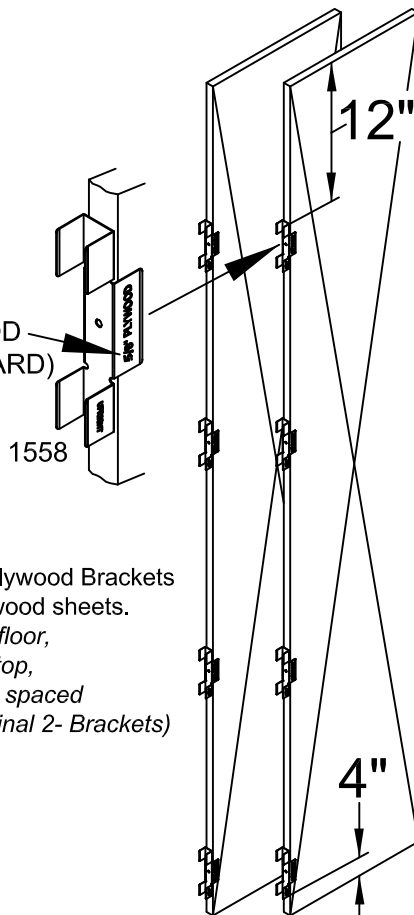

6

**SLIP** Fingers of Floor Bracket into a pair of split studs, butt Split Stud against plywood sheets making sure split studs go into 1558 bracket attached to the plywood sheets. Screw split studs to header, plumb studs, nail to floor between chalk lines.

7

**ATTACH** 4 - 1558 Plywood Brackets to each end of the other 2 - plywood sheets.

8

**TAKE** the 2- plywood sheets and butt the sheets against the installed split studs making sure split studs go into 1558 brackets attached to the plywood. If plywood is bowed, install with bow facing outward.

9

**SLIP** fingers of floor bracket into the other pair of split studs, butt Split studs against plywood sheets making sure split studs go into 1558 brackets attached to the plywood sheets. Screw split studs to header, plumb studs, nail to floor between chalk lines.

10

**AT THIS** point continue with step 6 of the Pocket Door Frame Instructions.

