



# INSTRUCTIONS

## Series 2204F SLIDING DOOR HARDWARE


FOR 3/4" DOORS ONLY  
Plywood or particle board  
panels up to 50 lbs.

### FINISHED OPENING WIDTHS

(FROM INSIDE TO INSIDE OF FINISHED DOOR JAMBS.)


#### 2 DOOR

MULTIPLY DOOR WIDTH BY 2, SUBTRACT 1"




#### 3 DOOR

MULTIPLY DOOR WIDTH BY 3, SUBTRACT 2"





#### 4 DOOR

MULTIPLY DOOR WIDTH BY 4, SUBTRACT 2"



Cut track to precise length of door opening width. Mount track as shown in diagram at right. Fasten hangers on back side of doors, 1" from each edge. Drill doors for pulls, 36" from bottom of door.



**NOTE:** To obtain full adjustment possibilities, screws must be located at TOP of each slot as shown in Fig. 1. Raise all hangers to top adjustment as shown in Fig. 2 when installing doors.

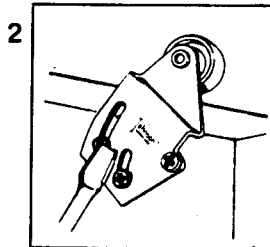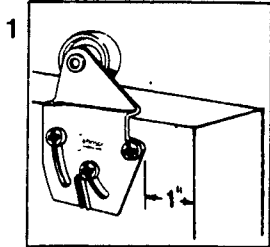

**MOUNT REAR DOOR FIRST** by tilting door back and resting hangers on rear rail.

**MOUNT FRONT DOOR** same way by tilting back and placing hangers on front rail.

**DOOR GUIDE** is located by moving both doors to jamb on one side, positioning guide between doors as shown, and fastening to floor. If floor is carpeted, use Johnson 2136 CARPET RISER.

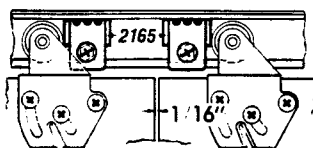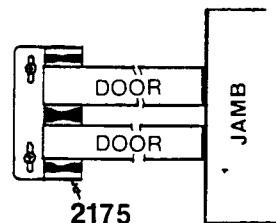

2165 STOPS (4 DOOR SETS)

### ACCESSORIES AVAILABLE:

NOT FURNISHED  
IN HARDWARE SET



**2136 CARPET RISER**  
A firm base for door guide when carpeting is used through opening.



#30 PULL  
2 1/8" Dia.

All pulls available in 3 finishes




**2155 STOP**  
Limits door travel



#35 PULL

**NOTE:**  
Use only on solid doors



#40 PULL

