



# INSTRUCTIONS


For 1-1/8" (28.6mm) to 1-3/8" (35mm)  
Thick Doors to 75 lbs (34K)

## 2711/2710 Series Prefabricated Pocket Door Frame



For Converging Doors Use  
1555ppk3 Converging Door Kit

ORDER NO.	FOR 1-1/8" OR 1-3/8" THICK DOORS (28.6MM) (35MM)	ROUGH OPENING HEIGHT & WIDTH	SHIPPING DATA WEIGHT EACH
27112068	1 — 2'0" (609.9mm) x 6'8" (2032mm) door	84-1/2" (2146mm) x 49-3/4" (1264mm)	23 lbs (10.4K)
27112468	1 — 2'4" (711.2mm) x 6'8" (2032mm) door	84-1/2" (2146mm) x 57-3/4" (1467mm)	26 lbs (11.8K)
27112668	1 — 2'6" (762.0mm) x 6'8" (2032mm) door	84-1/2" (2146mm) x 61-3/4" (1569mm)	27 lbs (12.2K)
27112868	1 — 2'8" (812.8mm) x 6'8" (2032mm) door	84-1/2" (2146mm) x 65-3/4" (1670mm)	28 lbs (12.7K)
27113068	1 — 3'0" (914.4mm) x 6'8" (2032mm) door	84-1/2" (2146mm) x 73-3/4" (1873mm)	31 lbs (14.0K)



Nail header onto box frame, square with jamb.  
Place frame into rough opening and shim until  
jamb are perfectly vertical and track is absolutely  
level. (Door will not stay in position if track is not  
level.) Nail into opening.  
Apply wall material BEFORE REMOVING SPACER  
BLOCKS. Make sure nails do not penetrate into  
pocket, or door will be damaged. Remove spacers.  
See note on sealing doors before installing bumper  
or installing door hanger plates.  
Install bumper on back edge of door 40" from bottom  
of door.  
Center hanger plates on top of door 2" (50mm) from  
each edge. Insert hanger pin into door plates and  
lock in position with nylon clip. Slide door into  
pocket and apply finish stops (not furnished), allow-  
ing 3/16" (4.8mm) on each side of door to allow for  
any door warpage. Use flat head screws (provided)  
to fasten the header stop on the side of the door that  
the nylon clips are on. This will facilitate removing  
the door, if so desired, at a later date.  
Fasten door guides at bottom and adjust for smooth  
operation.  
NOTE: Wood doors **MUST** be sealed on all four  
edges and both faces **PRIOR** to installation. Main-  
tain the recommended 3/16" (4.8mm) clearance be-  
tween door and jamb stops. These precautions will  
insure continued ease of door operations without  
the problems of serious door warpage.

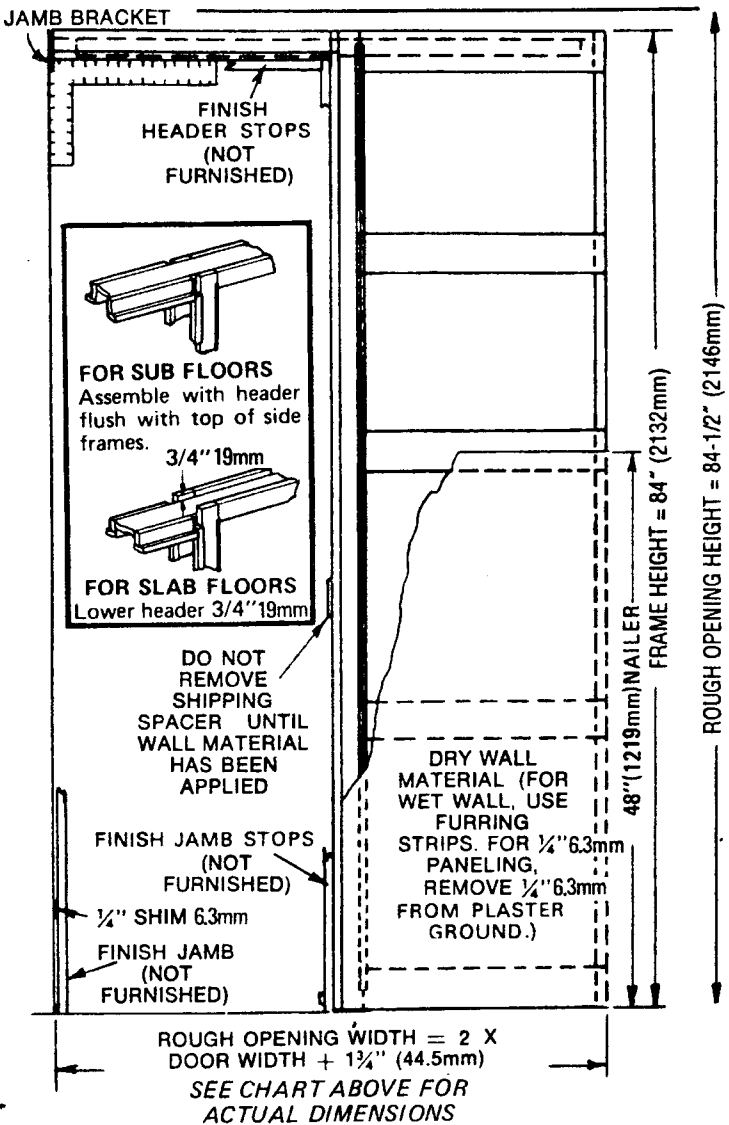

Cross sections of header showing available tracks

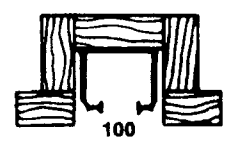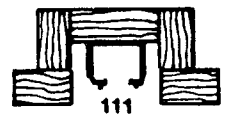




LOCATION OF HANGERS

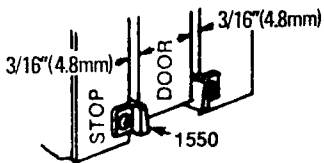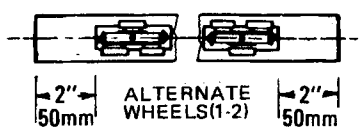


# HOW TO APPLY TRIM AROUND A POCKET DOOR OPENING

Finish trim (solid and split jambs, head stops, and casing) are not included as part of the 2711 FRAME package but are furnished by the customer. These instructions are shown as an aid to finishing your Pocket Door Frame and cover the peculiarities associated with its installation.


## 2711 WITH 111 TRACK FOR DOORS TO 75lbs(34K)

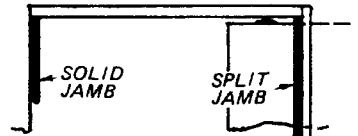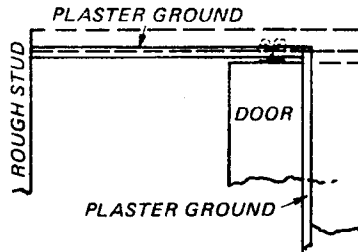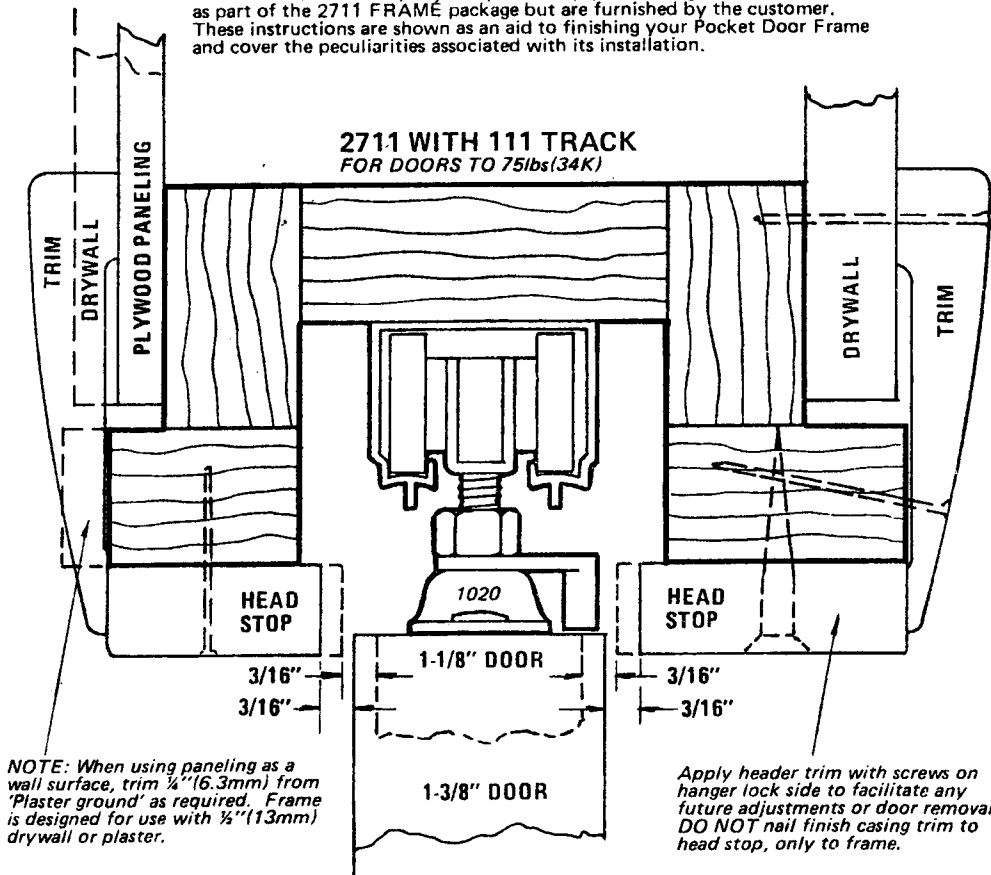

Apply finish solid and split jambs with ends butting against 'plaster grounds' of frame.

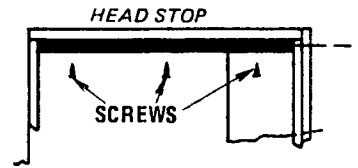


Fasten split head stops with screws on hanger lock tab side. (Other side can be nailed in place).

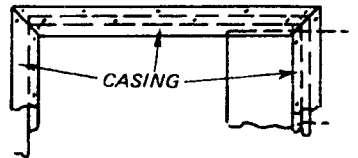

Apply finish casing around opening as desired. **DO NOT** nail casing at top to split head stop - nail to frame.

## 2710 with 100 TRACK FOR DOORS TO 125lbs(56K)

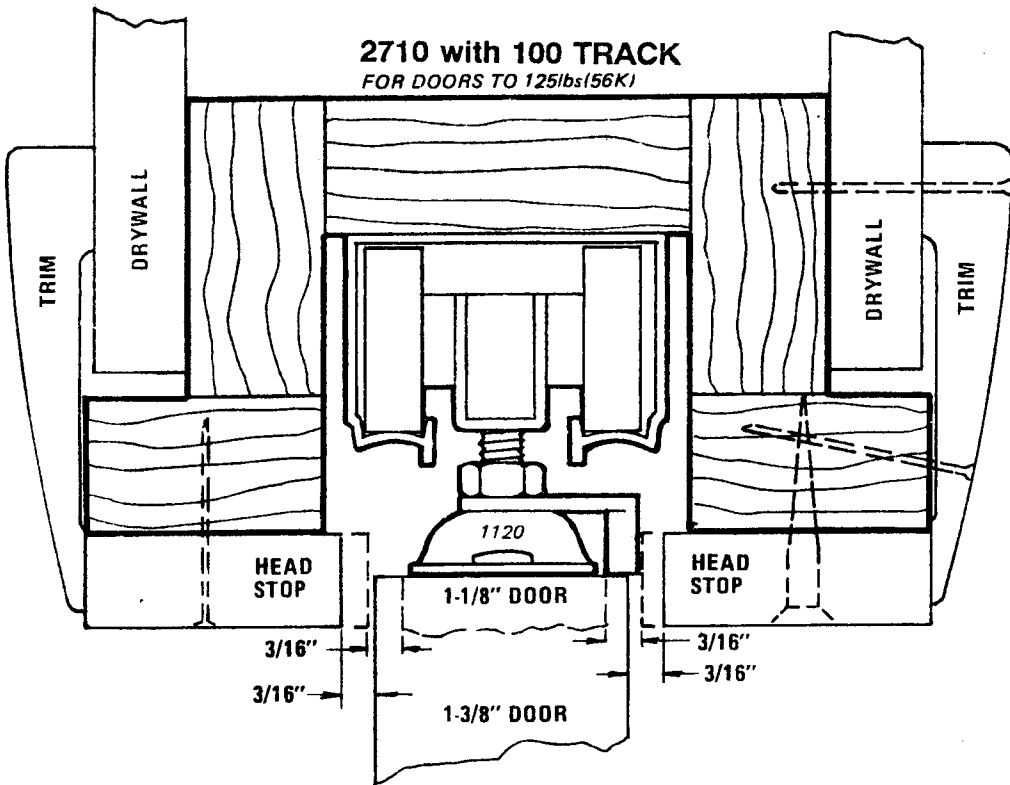

**YOUR DEALER ALSO STOCKS AN ASSORTMENT OF PULLS AND THE JOHNSON POCKET DOOR LOCK TO COMPLETE YOUR INSTALLATION.**